


## Assembly Instructions

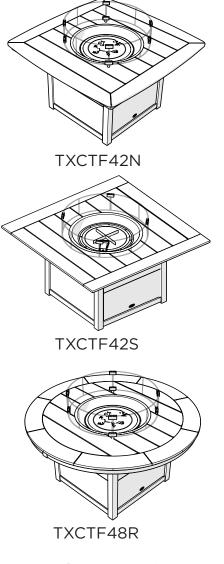

## TXCTF42N, TXCTF42S, TXCTF48R

### 20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

### Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

## Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email **support@trexfurniture.com** 

## Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

#### For a quick clean:


Simply wipe down with soap and water.


#### For a deeper clean:

You'll need:

- »  $^{1\!\!/_3}$  bleach and  $^{2\!\!/_3}$  water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

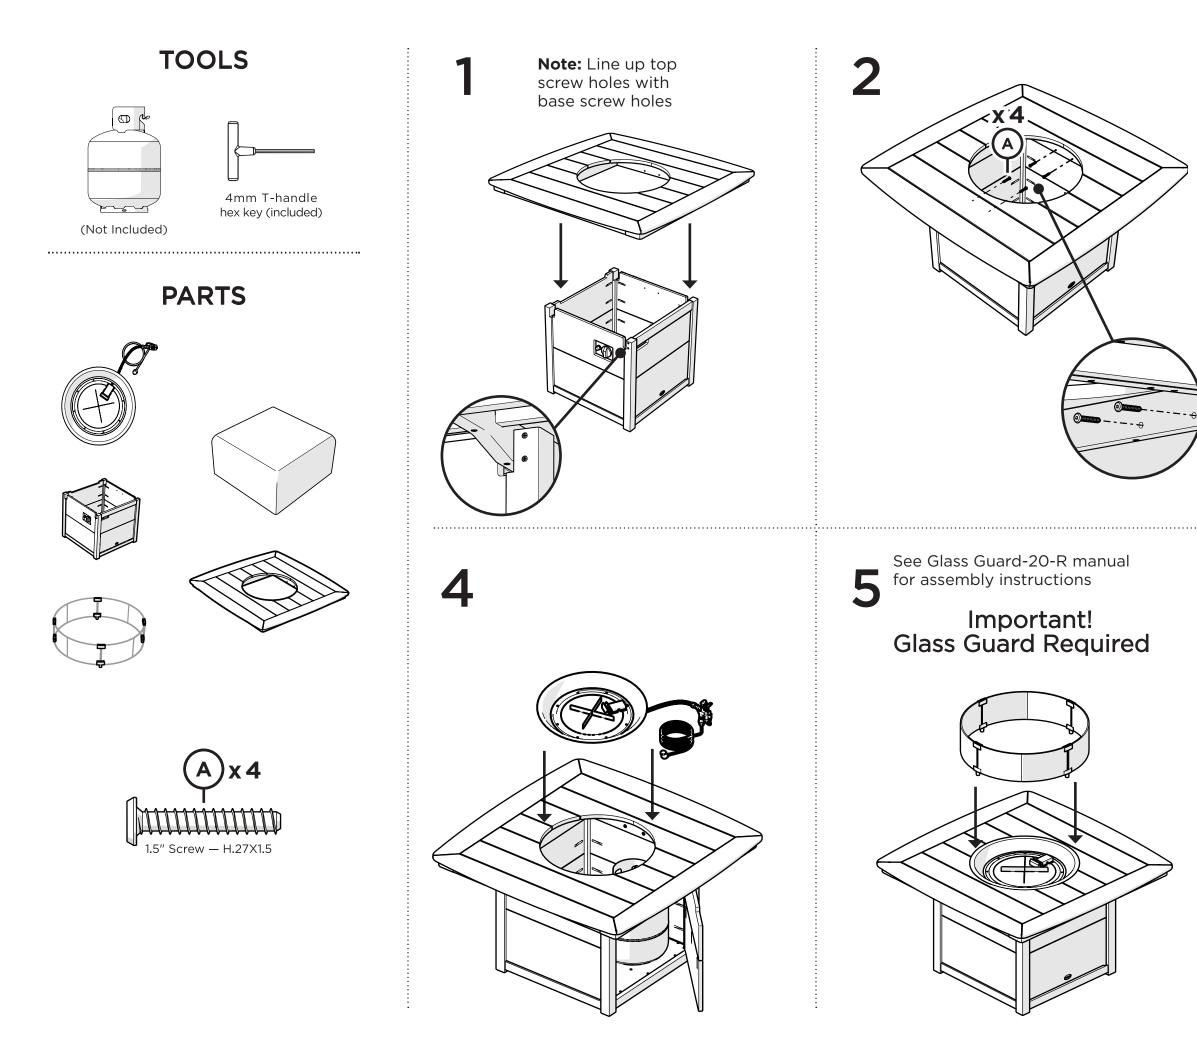

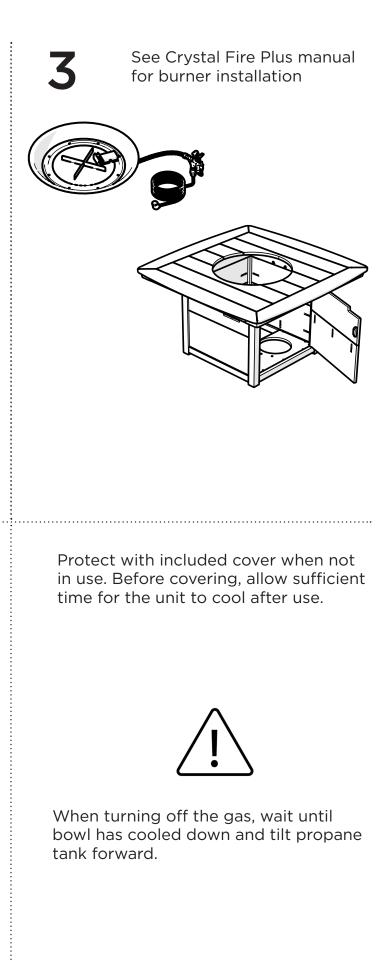

# **EDGE Modular Armless Chair**



# 4601CX

02/22/2022

## Assembly Instructions

