

Assembly Instructions



TX4513X
Yacht Club Deep
Seating Sofa

20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email support@trexfurniture.com

Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

For a quick clean:

Simply wipe down with soap and water.

For a deeper clean:

 
You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.


trexfurniture.com








4mm T-handle hex key (included)

PARTS

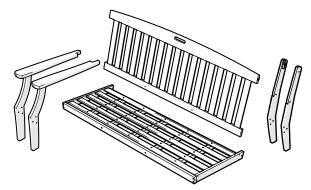

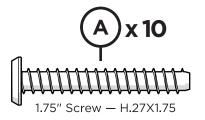


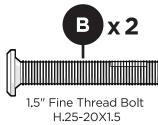

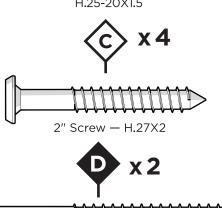


3" Screw — H.27X3

1

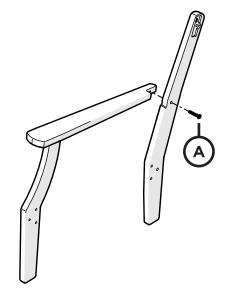


Repeat on opposite side

2

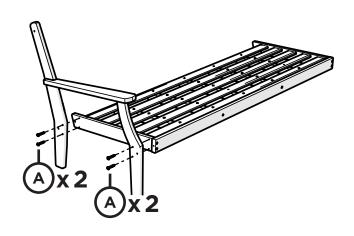

Repeat on opposite side

3

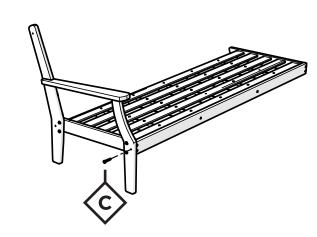

Repeat on opposite side

