

# **Assembly Instructions**



TXFDT3772 Monterey Bay 37" X 72" Dining Table



# 20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

# Share your space .....

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

# Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email support@trexfurniture.com

## Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

#### For a quick clean:

Simply wipe down with soap and water.

#### For a deeper clean:

 
You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.


trexfurniture.com


# **TOOLS**




(not included)


# **PARTS**

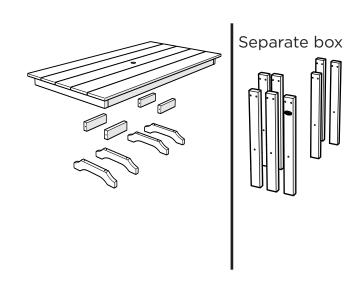


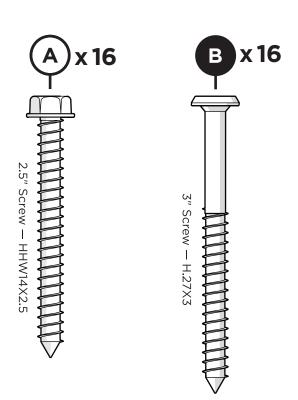


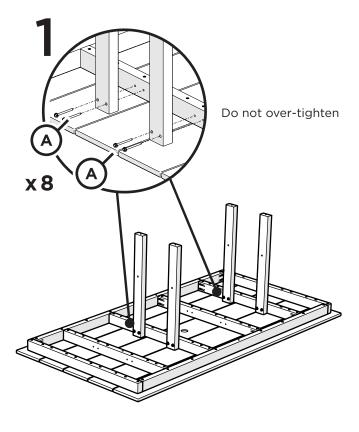


FDT3772 shown for parts and assembly

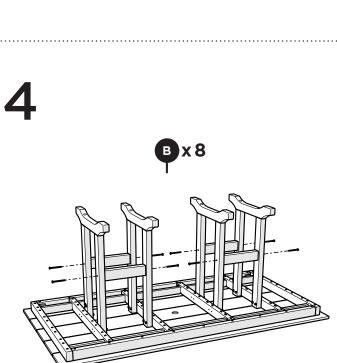

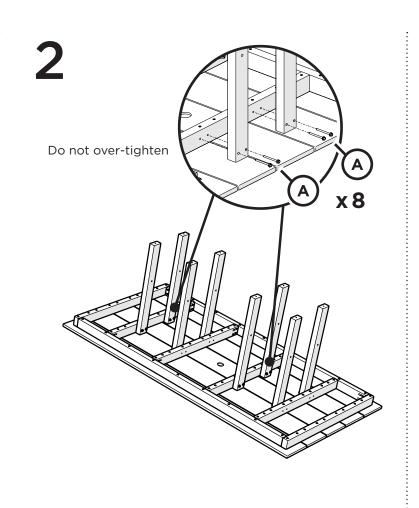

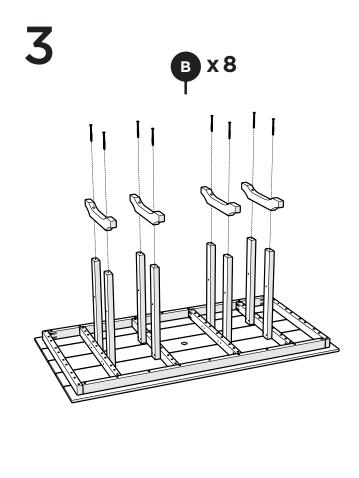


Removable table plug

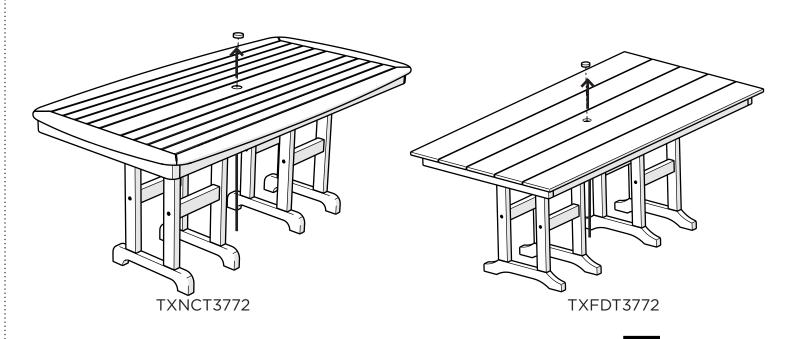





# **Assembly Instructions**

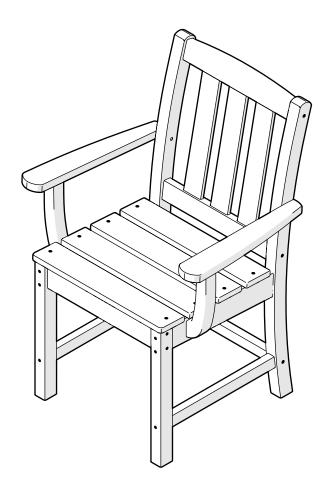

TXTLD230
Cape Cod Dining
Arm Chair

## 20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

# Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

# Having Trouble? ....

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email support@trexfurniture.com

## Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

#### For a quick clean:

Simply wipe down with soap and water.

#### For a deeper clean:

You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.


trexfurniture.com


# **TOOLS**

 


3/8" wrench (not included)

# **PARTS**

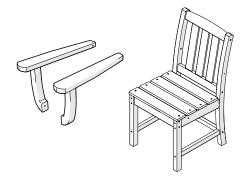

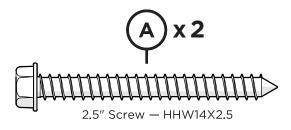





Cap Dowel Screw — HD.25X2+P11420

1


Twist dowel screw into arm until finger-tight, remove protective cap

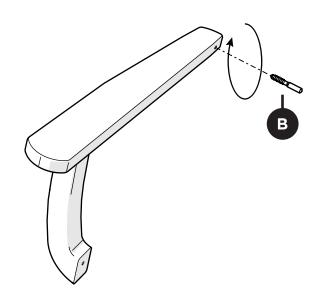


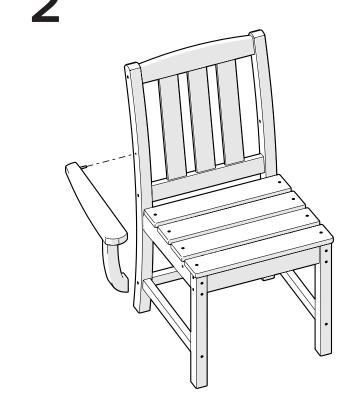






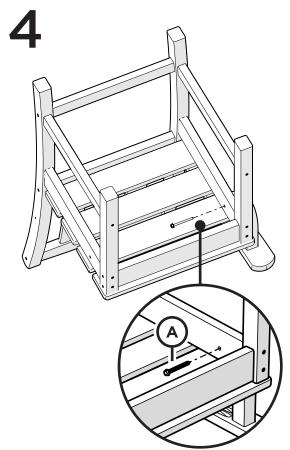

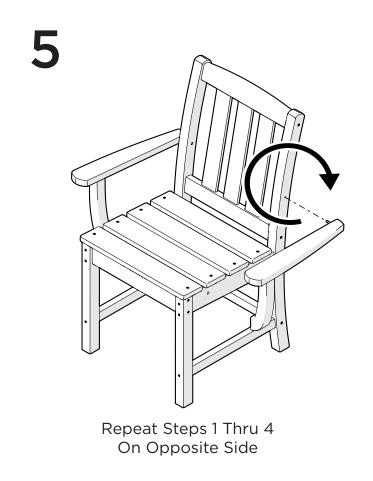

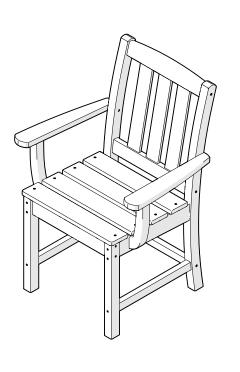





# **Assembly Instructions**



## NO ASSEMBLY REQUIRED

# TXTLD130 Cape Cod Dining Side Chair

trexfurniture.com

01/13/2023

## 20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

## Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email <a href="mailto:support@trexfurniture.com">support@trexfurniture.com</a>

## Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

## **Cleaning Tips**

Keep your Trex Outdoor Furniture looking brand new:

#### For a quick clean:

Simply wipe down with soap and water.

#### For a deeper clean:

You'll need:

- » ½ bleach and ½ water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.