




Assembly Instructions

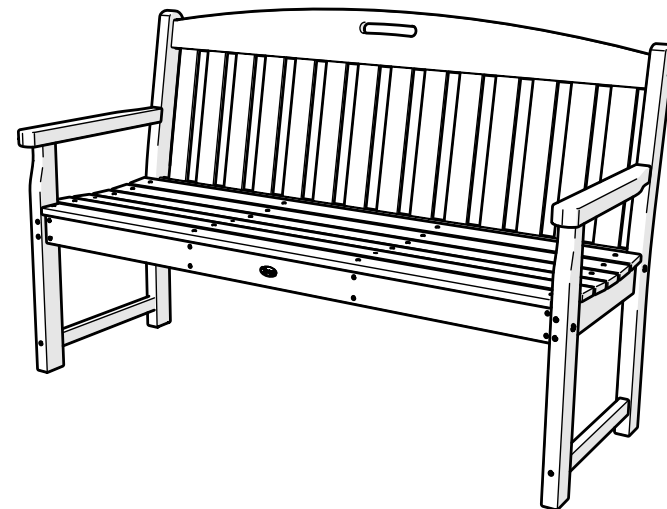

TXB60

Yacht Club 60" Bench

20-Year Warranty

To view our full warranty, please visit
trexfurniture.com/warranty

Share your space

We love to see where our furniture
ends up — snap a pic and share
it with us on Facebook!
facebook.com/trexfurniture

Having Trouble?

If you have questions or concerns regarding
assembly instructions or missing parts,
please contact us at **(877) 907-TREX** (8739)
or email support@trexfurniture.com

Cleaning Tips

Keep your Trex Outdoor Furniture™
looking brand new:

For a quick clean:

Simply wipe down with soap and water.


For a deeper clean:

You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush


Wipe on solution with your cloth
and let it sit on the lumber for a few
minutes (this will not affect the color).
Then, loosen any dirt and debris that
may catch in surface grooves with a
soft bristle brush; hose down to rinse.

TOOLS

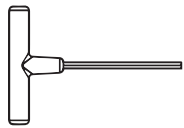

4mm T-handle
hex key (included)

PARTS

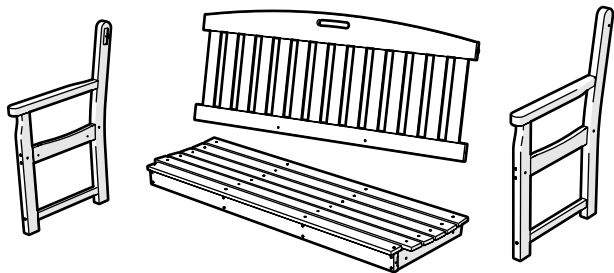


A x2




1.875" Fine Thread Bolt
H.25-20X1.875

 B x4



1.75" Screw — H.27X1.75

 
C x6




2.5" Screw — H.27X2.5

1

Do not tighten bolts

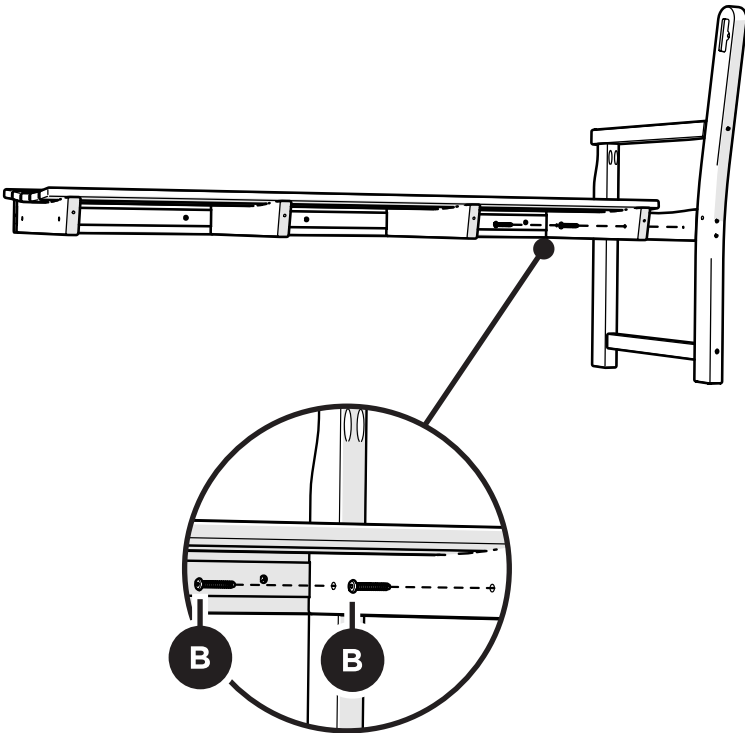

2

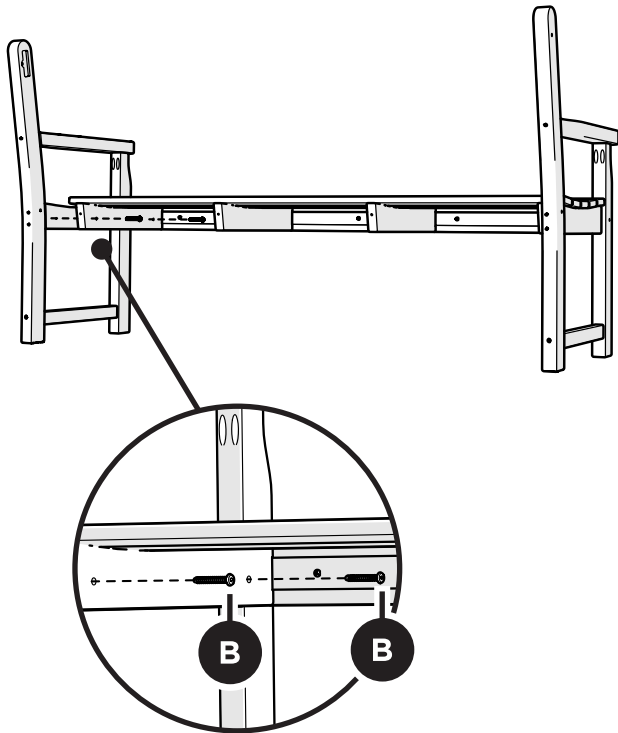


3

Ensure **Fine Thread Bolts** are used




1.875" Fine Thread Bolt
H.25-20X1.875

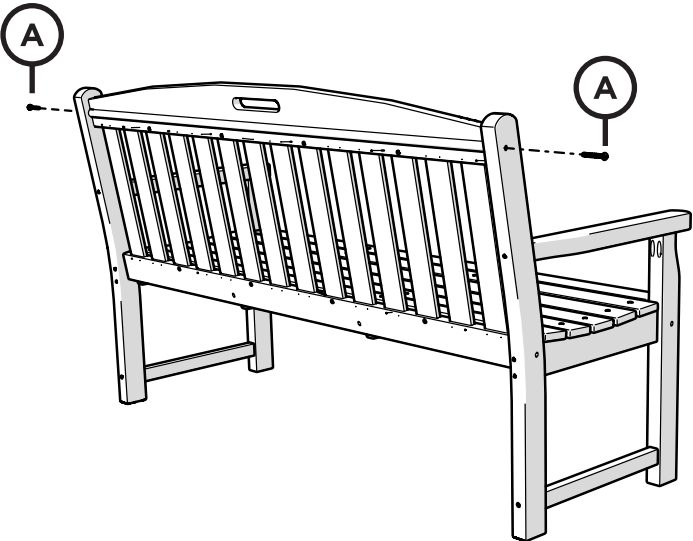

4

Tighten bolts

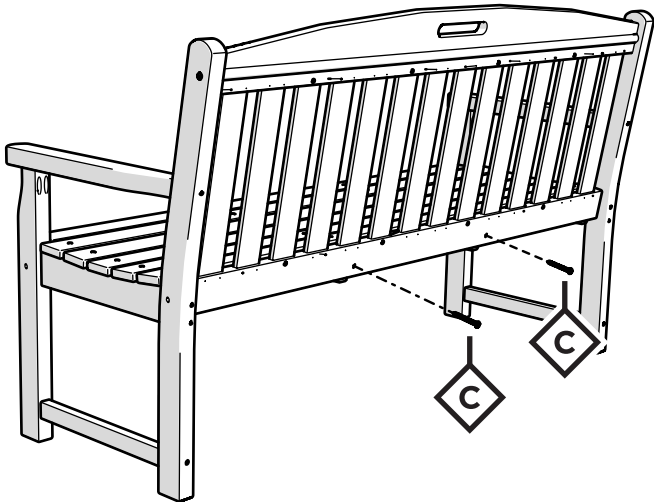

5

