


## **Assembly Instructions**

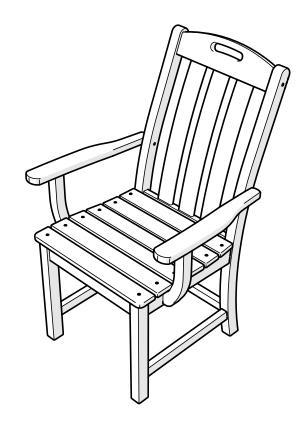

TXD230, TXD231,
TXD232
Yacht Club Arm Chair

### 20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

### Share your space .....

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

### Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email support@trexfurniture.com

#### Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

#### For a quick clean:

Simply wipe down with soap and water.

#### For a deeper clean:

You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.


trexfurniture.com

 
# **TOOLS**



3/8" wrench (not included)

## **PARTS**

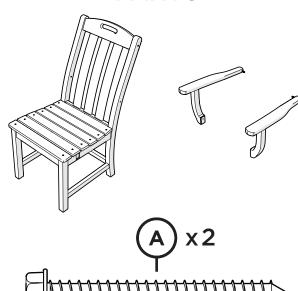




2.5" Screw — HHW14X2.5


Cap Dowel Screw — HD.25X2+P11420



Hole Plug — HSP.312x.25 (Extra) 1

Twist dowel screw into arm until finger-tight, remove protective cap

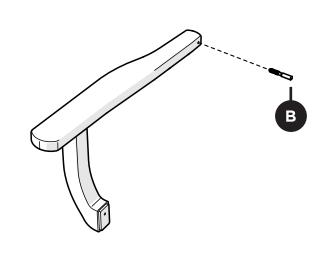

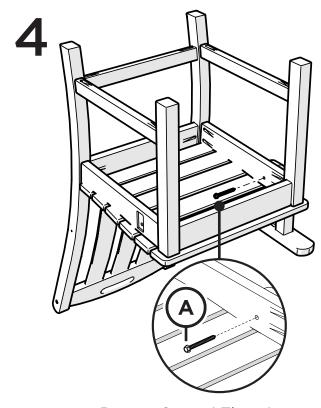

Repeat Steps 1 Thru 4 On Opposite Side

