


# **Assembly Instructions**

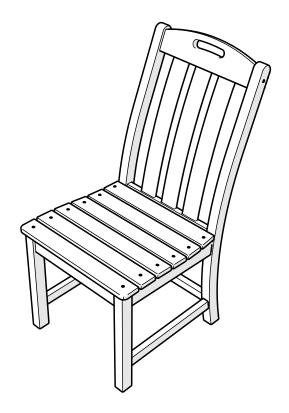

### NO ASSEMBLY REQUIRED

**TXD130** 

Yacht Club Dining
Side Chair

trexfurniture.com

## 20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

### Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email <a href="mailto:support@trexfurniture.com">support@trexfurniture.com</a>

## Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

#### **Cleaning Tips**

Keep your Trex Outdoor Furniture looking brand new:

#### For a quick clean:

Simply wipe down with soap and water.

#### For a deeper clean:

You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.