




## Assembly Instructions

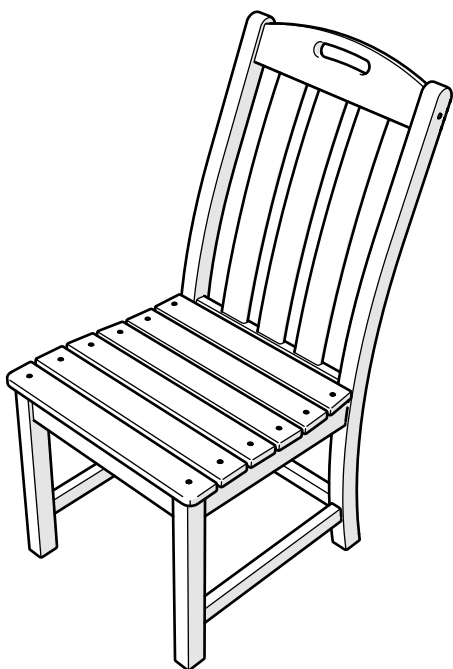

**NO ASSEMBLY REQUIRED**

# TXD130

## Yacht Club Dining Side Chair

[trexfurniture.com](http://trexfurniture.com)

12/14/2018

## ..... 20-Year Warranty .....

To view our full warranty, please visit  
**[trexfurniture.com/warranty](http://trexfurniture.com/warranty)**

## ..... Having Trouble? .....

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX (8739)** or email **[support@trexfurniture.com](mailto:support@trexfurniture.com)**

## ..... Share your space .....

We love to see where our furniture ends up — snap a pic and share it with us on Facebook!  
**[facebook.com/trexfurniture](https://facebook.com/trexfurniture)**

## ..... Cleaning Tips .....

Keep your Trex Outdoor Furniture looking brand new:

### For a quick clean:

Simply wipe down with soap and water.

### For a deeper clean:


You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush


Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.



## Assembly Instructions

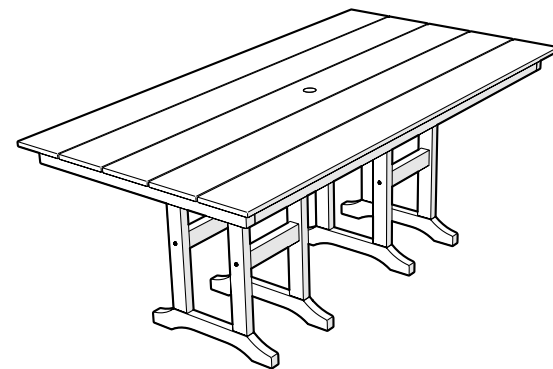

**TXFDT3772**  
**Monterey Bay 37" X 72"**  
**Dining Table**

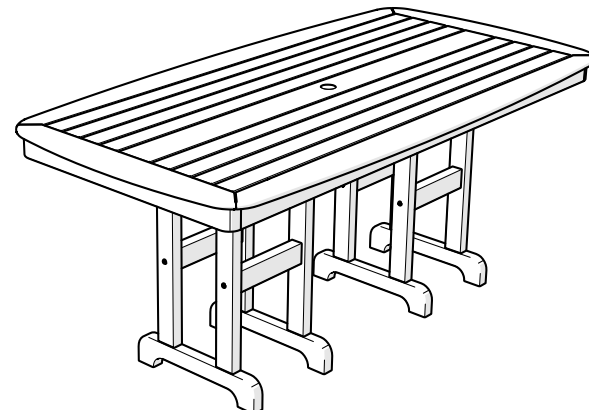

**TXNCT3772**  
**Yacht Club 37" X 72"**  
**Dining Table**

### 20-Year Warranty

To view our full warranty, please visit  
[trexfurniture.com/warranty](http://trexfurniture.com/warranty)

### Share your space

We love to see where our furniture  
ends up — snap a pic and share  
it with us on Facebook!  
[facebook.com/trexfurniture](https://facebook.com/trexfurniture)

### Having Trouble?

If you have questions or concerns regarding  
assembly instructions or missing parts,  
please contact us at **(877) 907-TREX** (8739)  
or email [support@trexfurniture.com](mailto:support@trexfurniture.com)

### Cleaning Tips

Keep your Trex Outdoor Furniture™  
looking brand new:

#### For a quick clean:

Simply wipe down with soap and water.


#### For a deeper clean:

You'll need:


- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth  
and let it sit on the lumber for a few  
minutes (this will not affect the color).  
Then, loosen any dirt and debris that  
may catch in surface grooves with a  
soft bristle brush; hose down to rinse.

TOOLS

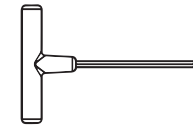


4mm T-handle  
hex key (included)


 


3/8" wrench  
(not included)


PARTS

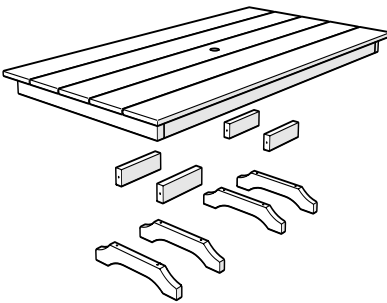

Separate box

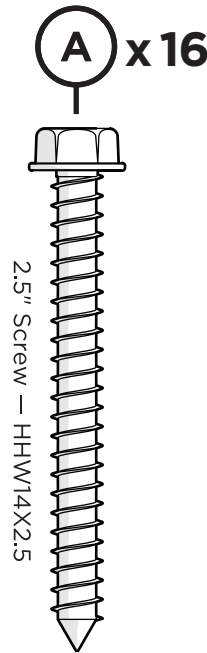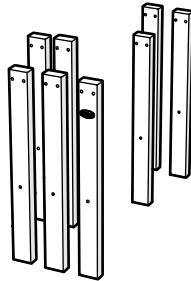


2.5" Screw — HHW14X2.5

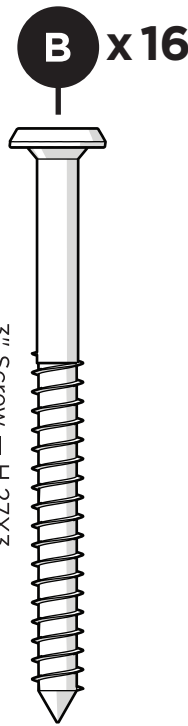


3" Screw — H.27X3

1

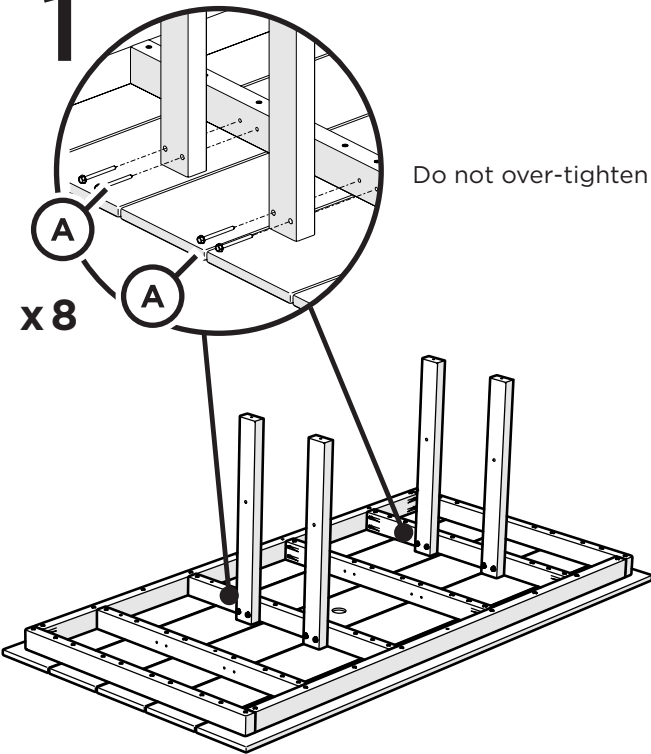


FDT3772 shown for parts and assembly



2

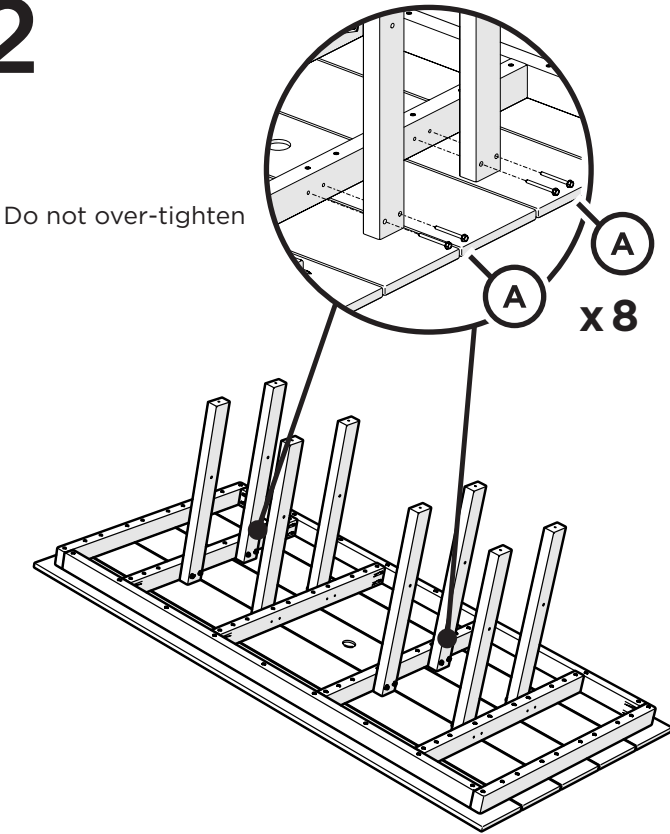

3

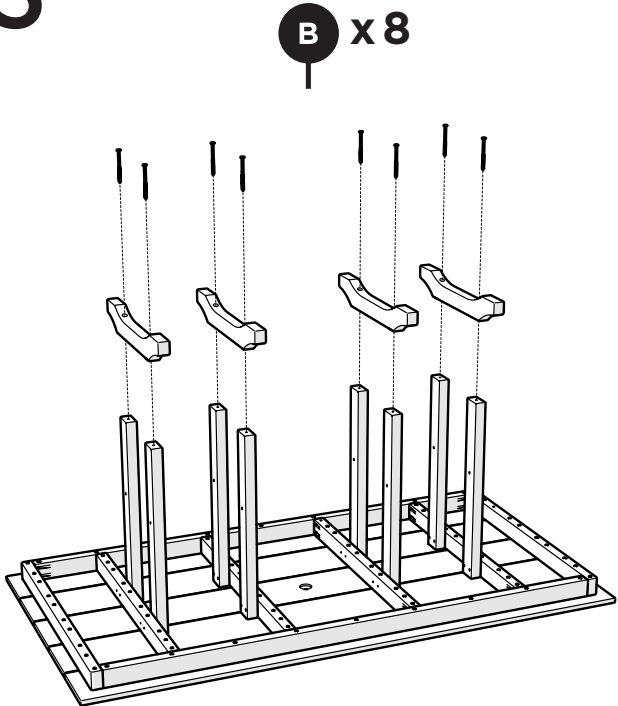

4

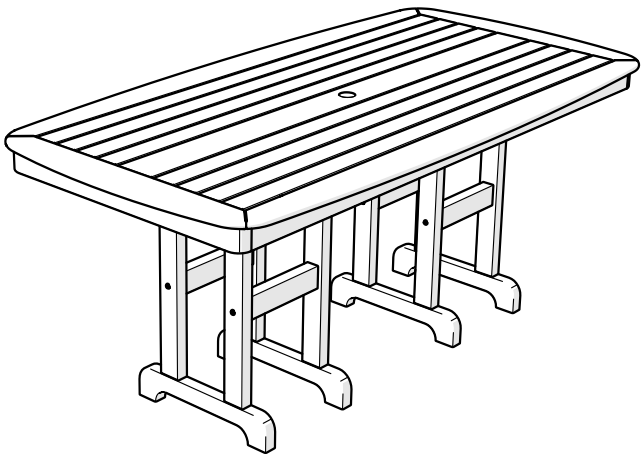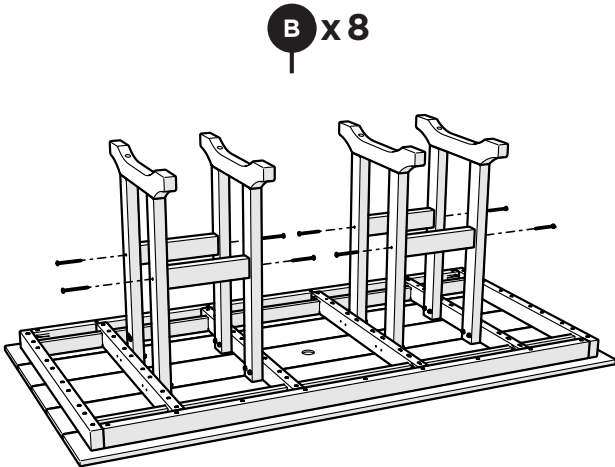


TXNCT3772



TXFDT3772



## Assembly Instructions

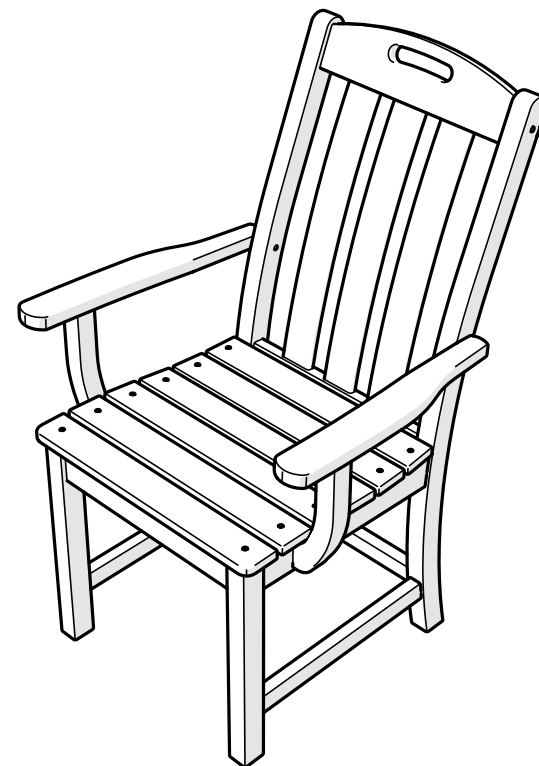

## TXD230, TXD231, TXD232 Yacht Club Arm Chair

### 20-Year Warranty

To view our full warranty, please visit  
[trexfurniture.com/warranty](http://trexfurniture.com/warranty)

### Share your space

We love to see where our furniture  
ends up — snap a pic and share  
it with us on Facebook!  
[facebook.com/trexfurniture](https://facebook.com/trexfurniture)

### Having Trouble?

If you have questions or concerns regarding  
assembly instructions or missing parts,  
please contact us at (877) 907-TREX (8739)  
or email [support@trexfurniture.com](mailto:support@trexfurniture.com)

### Cleaning Tips

Keep your Trex Outdoor Furniture™  
looking brand new:

#### For a quick clean:

Simply wipe down with soap and water.

 
#### For a deeper clean:

You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush


Wipe on solution with your cloth  
and let it sit on the lumber for a few  
minutes (this will not affect the color).  
Then, loosen any dirt and debris that  
may catch in surface grooves with a  
soft bristle brush; hose down to rinse.

TOOLS




3/8" wrench  
(not included)

PARTS

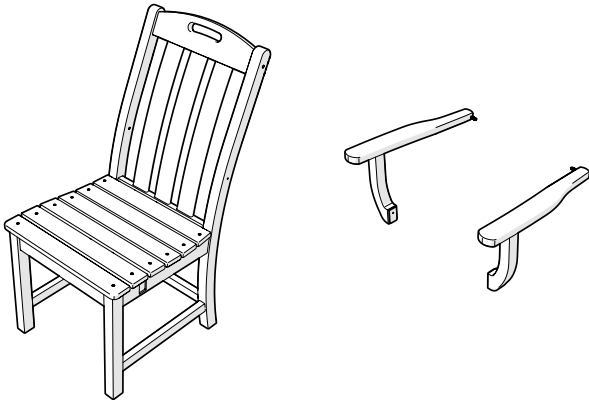


A x2

 


2.5" Screw — HHW14X2.5


1

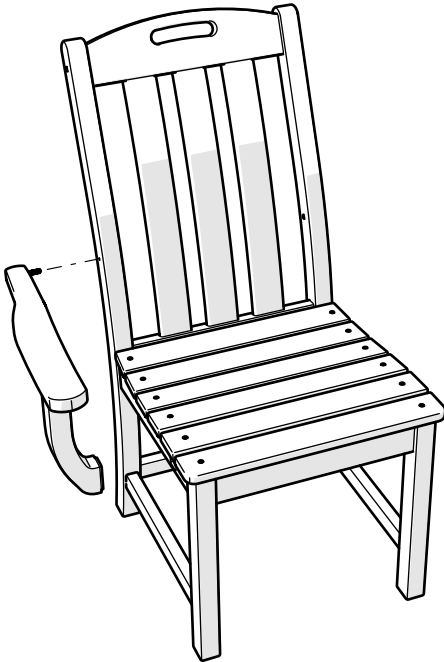



2

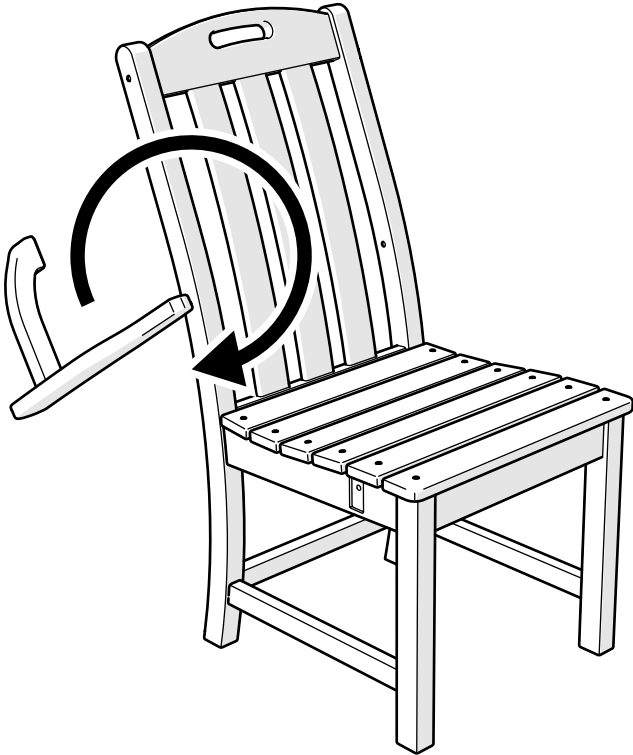


3

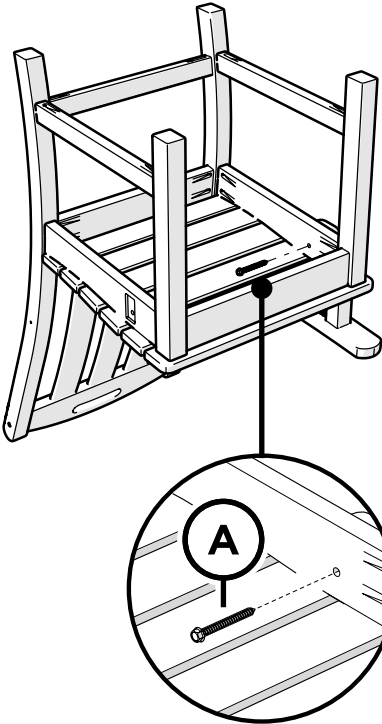


4

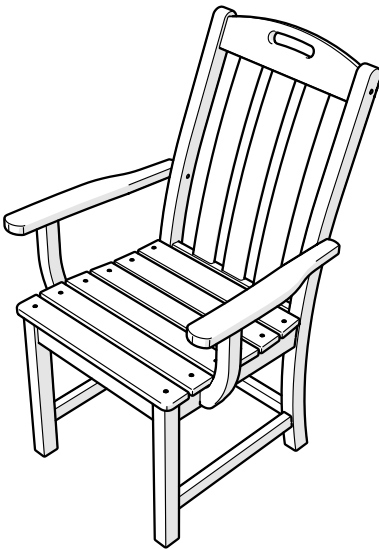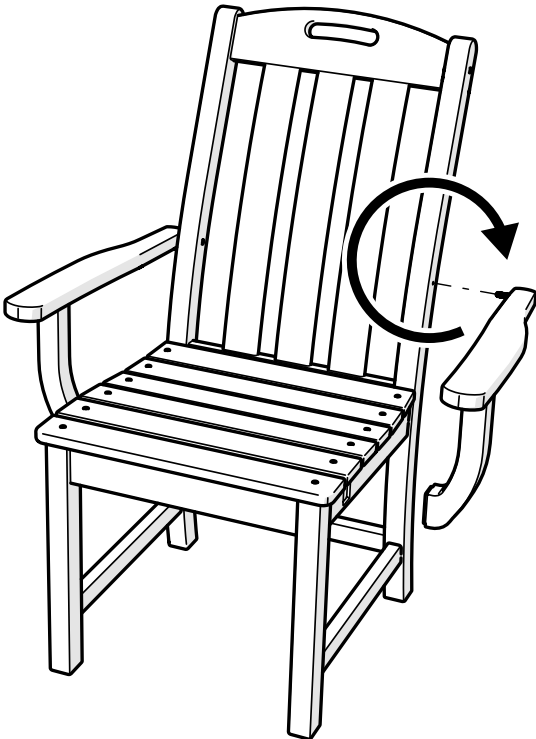

TXD230

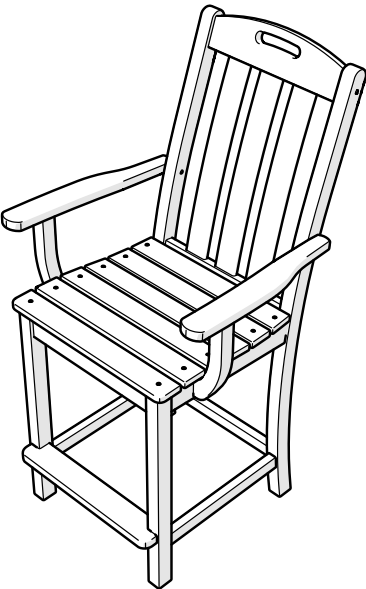

TXD231

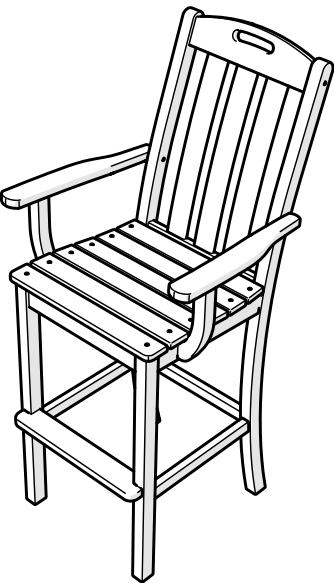

TXD232