


Assembly Instructions

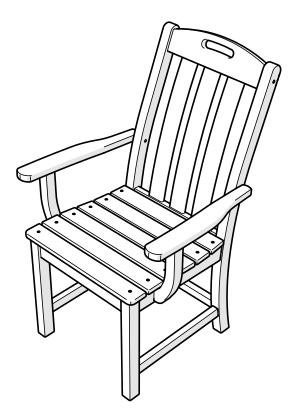

TXD230, TXD231, TXD232 Yacht Club Arm Chair

20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email **support**@trexfurniture.com

Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

For a quick clean:


Simply wipe down with soap and water.

For a deeper clean:

You'll need:

- » $^{1\!\!/_3}$ bleach and $^{2\!\!/_3}$ water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

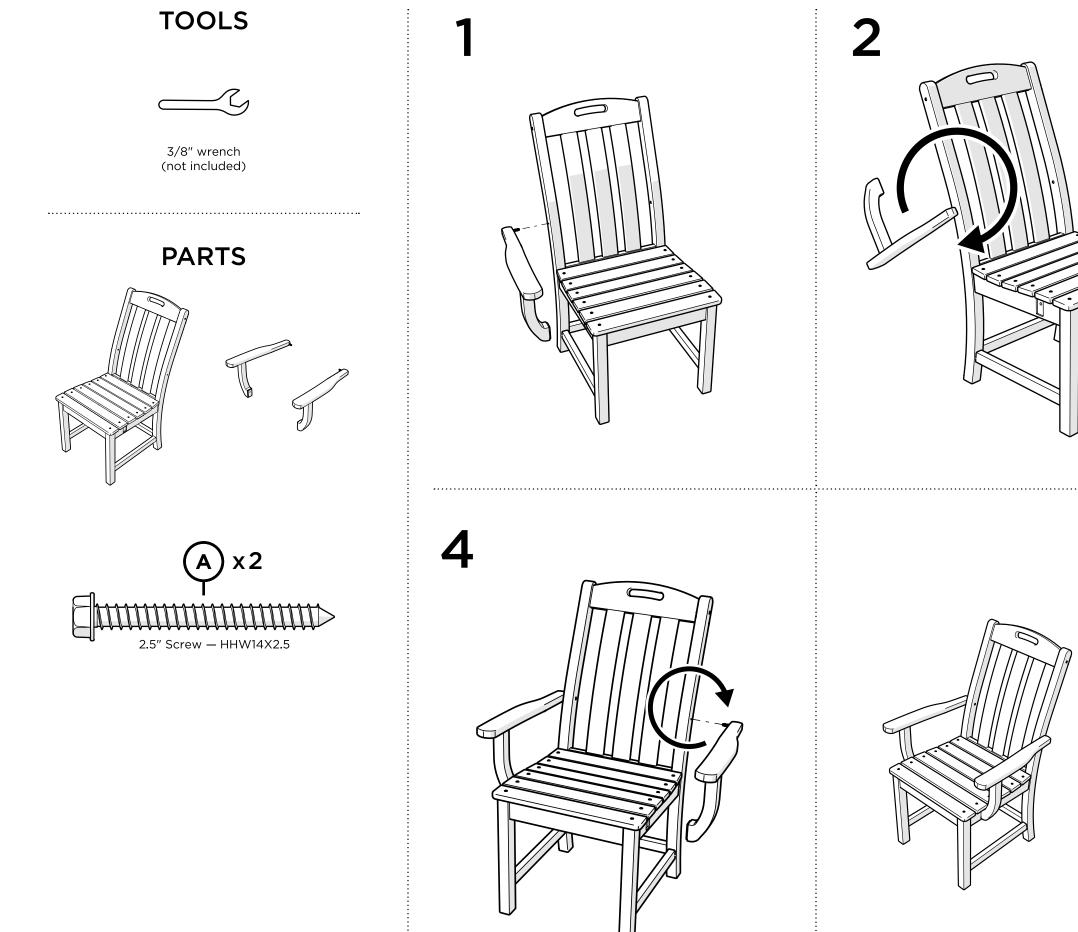



TXD230







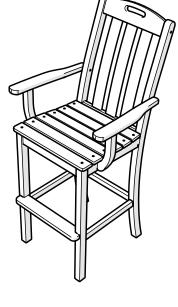

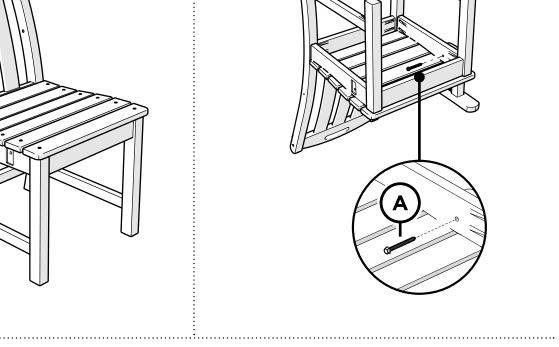



Assembly Instructions



TXFDT37 Monterey Bay 37" **Dining Table**



TXRT236 TXRT248 Monterey Bay Round 36" **Dining Table**

Monterey Bay Round 48" **Dining Table**



Dining Table Dining Table

20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

Share your space •••••

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at (877) 907-TREX (8739) or email support@trexfurniture.com

trexfurniture.com

Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

For a quick clean:


Simply wipe down with soap and water.


For a deeper clean:


You'll need:

- » $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

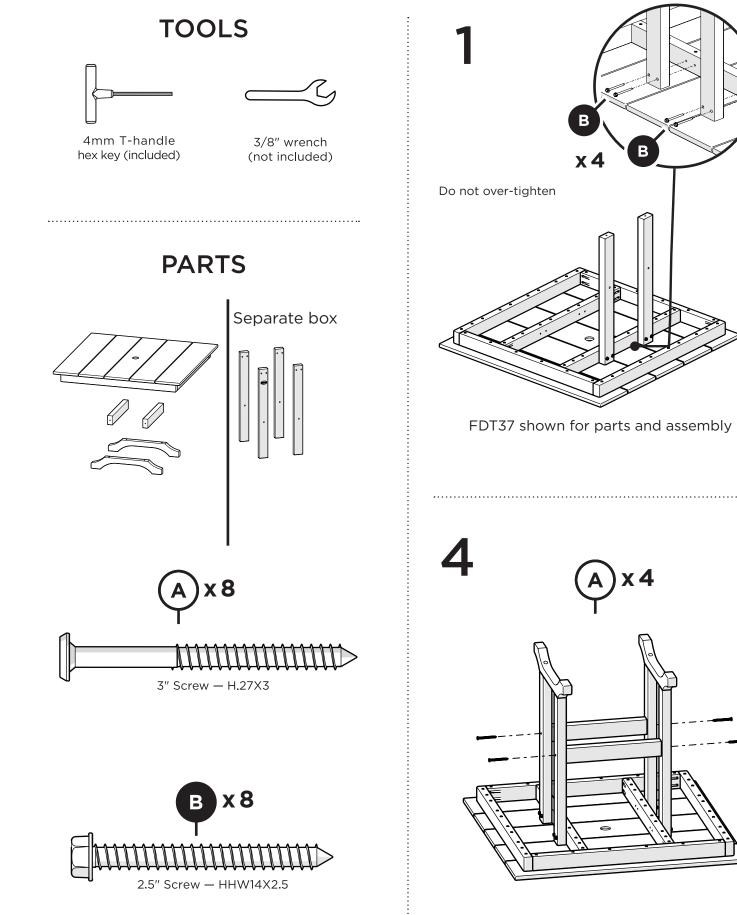

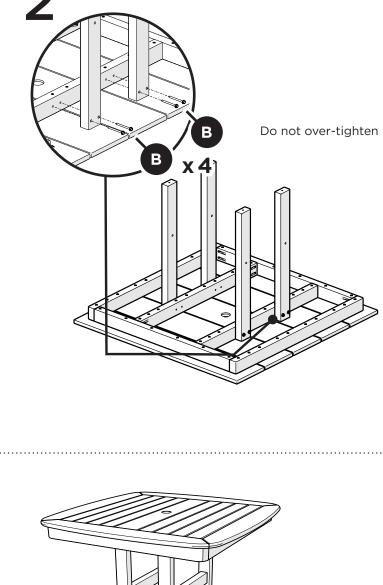


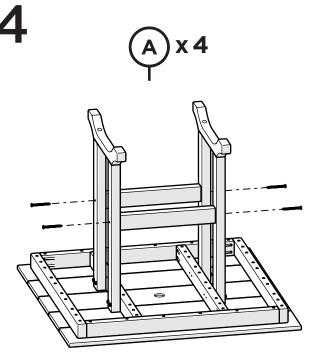



TXNCT37, TXNCT44



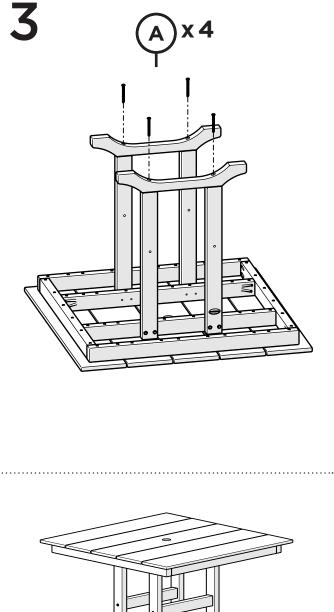





TXRT236, TXRT248