




Assembly Instructions

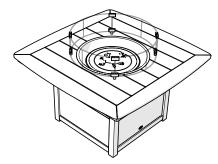

TXCTF42N

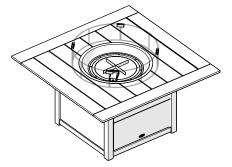

TXCTF42S

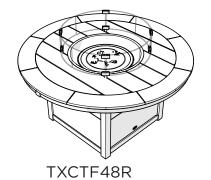

TXCTF42N, TXCTF42S, TXCTF48R

20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email support@trexfurniture.com

Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

For a quick clean:

Simply wipe down with soap and water.

For a deeper clean:


You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush


Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.


trexfurniture.com


TOOLS

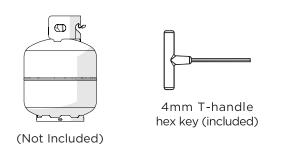


PARTS

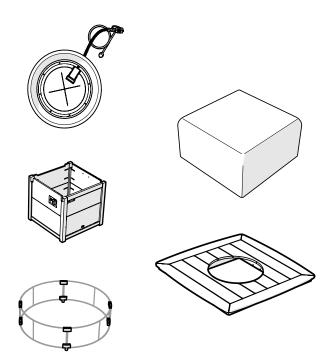


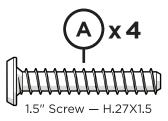

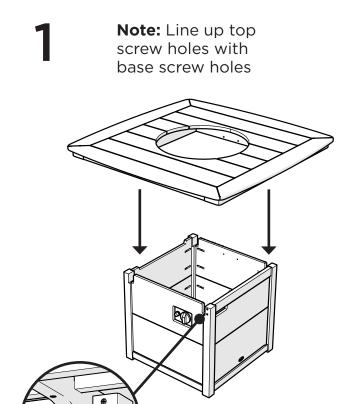


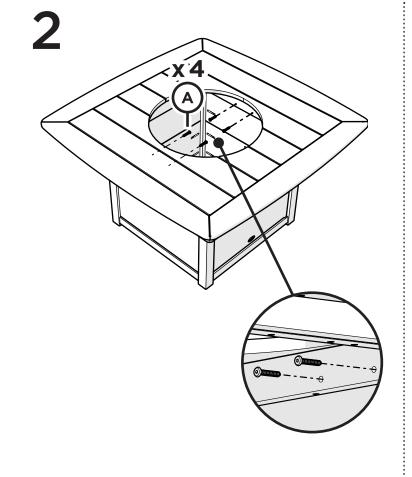

See Crystal Fire Plus manual for burner installation

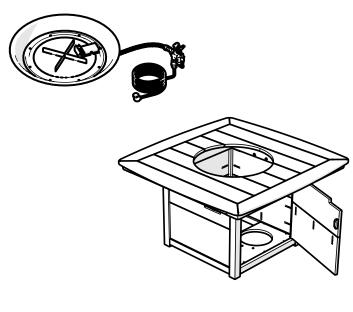


4

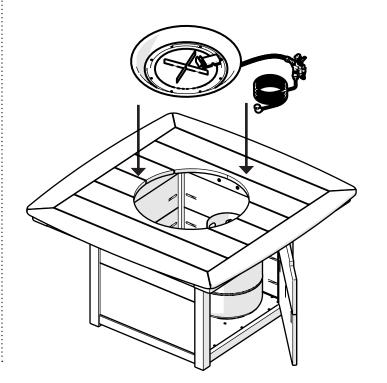

See Glass Guard-20-R manual for assembly instructions

Important! Glass Guard Required

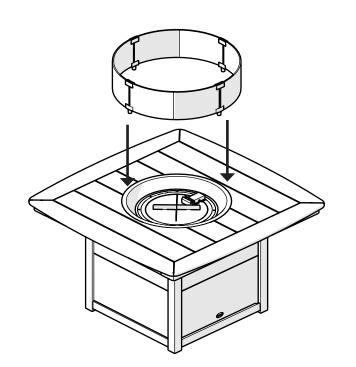

Protect with included cover when not in use. Before covering, allow sufficient time for the unit to cool after use.



When turning off the gas, wait until bowl has cooled down and tilt propane tank forward.



Assembly Instructions



TXAD4034

Monterey Bay

Adirondack Chair

20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email support@trexfurniture.com

Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

For a quick clean:

Simply wipe down with soap and water.

For a deeper clean:

 
You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush


Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.


trexfurniture.com


TOOLS




PARTS

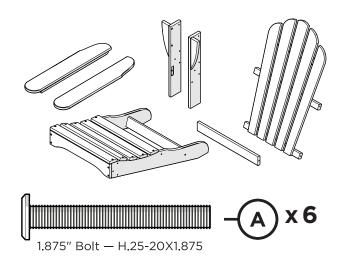

 


 

 



Flange Nylon Lock Nut HN.25-20FN

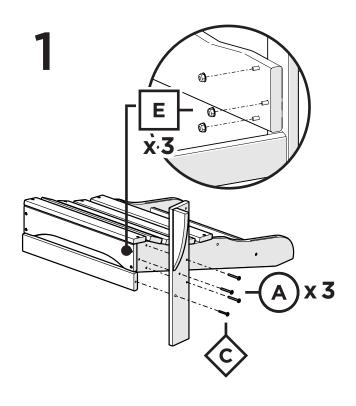

Bolts may need to be tapped into the holes if they are a little snug.

